



← UV Lamp 1

← UV Lamp 2

M-Series UV

UV LAMP
MONITOR

Flashing Red: UV-Lamp(s)
not working—replace


Green Light:
System Good

WARNING
Risk of electric shock.
Can cause injury or death.
Disconnect all remote electric
power supplies before servicing.
Input: 120-230 VAC (auto sensing)
Ballast: Class P Type 1
Outdoor, Sound Rated A

UV Hazard
ALWAYS protect eyes from
ultraviolet light. NEVER look at
UV lamps in operation. Unplug
before re-lamping or servicing.
Ultravation®
Professional Indoor Air Quality Products
Ultravation.com

HVAC disinfection to prevent mold and mildew accumulation

Replace UV lamp(s) annually. Contact your HVAC contractor for
replacement information or visit Ultravation.com/faq for more information.

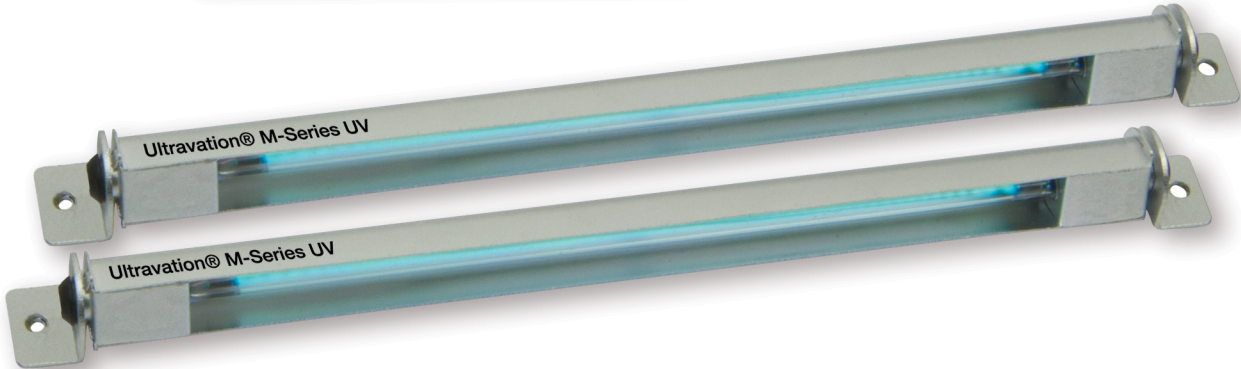

Ultravation® M-Series UV

Ultravation® M-Series UV